## **Azure Stack-HLH Configuration Help**


## 1. ===Node Configuration ===

- 1.1 ===Power Supply===
  - 1.1.1 C13 AC power cord

1.Power Cable recommend Wall Plug and PDU Style, if the use condition is clear, it could select the Wall Plug or PDU Style.

2.2000W and below power supply use C13 power cable, PDU power cable is 12A in Japan, other countries is 10A; wall plug cable is 12A in Japan, other countries is 10A. 3.If use the wall plug, please select power cable by select Area model(C13 to C13 Wall plug, normal extension cord );

4.If use the PDU plug, please select C13 PDU power cable(C13 to C14 PDU plug, PDU extension cord ).

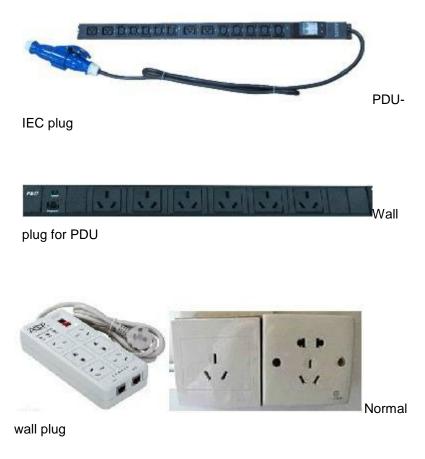

• 1.1.2 C13 wall plug power cord

1.Power Cable recommend Wall Plug and PDU Style, if the use condition is clear, it could select the Wall Plug or PDU Style.

2.2000W and below power supply use C13 power cable, PDU power cable is 12A in

Japan, other countries is 10A; wall plug cable is 12A in Japan, other countries is 10A. 3.If use the wall plug, please select power cable by select Area model(C13 to C13 Wall plug, normal extension cord );

4.If use the PDU plug, please select C13 PDU power cable (C13 to C14 PDU plug, PDU extension cord ).



Denmark C13-C13



Korea C13-C13




Argentina C13-C13



Australia C13-C13



Brazil C13-C13

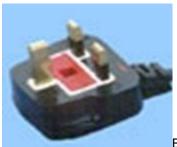

Britain C13-C13



China C13-C13



Europe C13-C13



South Africa C13-C13



India C13-C13



Italy C13-C13



Japan C13-C13



North America C13-C13



Switzerland C13-C13

• 1.1.3 C13 PDU power cord

1.Power Cable recommend Wall Plug and PDU Style, if the use condition is clear, it could select the Wall Plug or PDU Style.

2.2000W and below power supply use C13 power cable, PDU power cable is 12A in Japan, other countries is 10A; wall plug cable is 12A in Japan, other countries is 10A.3.If use the wall plug, please select power cable by select Area model(C13 to C13 Wall plug, normal extension cord );

4.If use the PDU plug, please select C13 PDU power cable(C13 to C14 PDU plug, PDU extension cord ).



- 1.2 ===Accessory===
  - 1.2.1 Rack rail

Holding Rails Without Cable Management Arm does not support online maintenance, but if a cable management arm is installed, it supports online maintenance.

Rail: 1U Ball Bearing Rail Kit(21241440)

Slide