



**Huawei MZ110 NIC**  
**V100R001**

## **White Paper**

**Issue**     **07**  
**Date**       **2016-11-21**

**Copyright © Huawei Technologies Co., Ltd. 2016. All rights reserved.**

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

## **Trademarks and Permissions**



HUAWEI and other Huawei trademarks are trademarks of Huawei Technologies Co., Ltd.

All other trademarks and trade names mentioned in this document are the property of their respective holders.

## **Notice**

The purchased products, services and features are stipulated by the contract made between Huawei and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

## **Huawei Technologies Co., Ltd.**

Address: Huawei Industrial Base  
Bantian, Longgang  
Shenzhen 518129  
People's Republic of China

Website: <http://e.huawei.com>

# About This Document

## Purpose

This document describes the MZ110 in terms of its functions, appearance, features, applications, and technical specifications. You can obtain comprehensive information about the MZ110 by reading this document.





## Intended Audience

This document is intended for:

- Huawei presales engineers
- Channel partner presales engineers
- Enterprise presales engineers

## Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 <b>DANGER</b>	Alerts you to a high risk hazard that could, if not avoided, result in serious injury or death.
 <b>WARNING</b>	Alerts you to a medium or low risk hazard that could, if not avoided, result in moderate or minor injury.
 <b>CAUTION</b>	Alerts you to a potentially hazardous situation that could, if not avoided, result in equipment damage, data loss, performance deterioration, or unanticipated results.
 <b>NOTE</b>	Provides additional information to emphasize or supplement important points in the main text.

## Change History

### Issue 07(2016-11-21)

This issue is the seventh official release.

### Issue 06 (2016-08-17)

This issue is the sixth official release.

### Issue 05 (2016-05-15)

This issue is the fifth official release.

Type	Change Description
Modify	The document content is optimized.

### Issue 04 (2016-03-31)

This issue is the fourth official release.

### Issue 03 (2015-05-30)

This issue is the third official release.

### Issue 02 (2014-12-02)

This issue is the second official release.

Type	Change Description
Delete	The trademark Tecal is deleted from the document name and content.

### Issue 01 (2014-11-10)

This issue is the first official release.

---

# Contents

---

<b>About This Document.....</b>	<b>ii</b>
<b>1 Overview.....</b>	<b>1</b>
1.1 Functions.....	2
1.2 Appearance.....	2
<b>2 Features.....</b>	<b>4</b>
2.1 Feature List.....	5
2.2 Feature Description.....	5
2.3 Standards Compliance.....	5
<b>3 Applications.....</b>	<b>7</b>
3.1 Compatible Compute Nodes.....	8
3.2 Connected I/O Modules.....	8
3.3 MZ110 Networking.....	10
3.4 Supported OSs.....	11
3.5 Connected Ethernet Switches.....	12
<b>4 Technical Specifications.....</b>	<b>13</b>
4.1 Technical Specifications.....	14
<b>A Acronyms and Abbreviations.....</b>	<b>15</b>

---

# Figures

---

<b>Figure 1-1</b> MZ110 appearance.....	2
<b>Figure 1-2</b> MZ110 installation positions on a half-width compute node.....	3
<b>Figure 1-3</b> MZ110 installation positions on a full-width compute node.....	3
<b>Figure 3-1</b> Connections between the MZ110s on a half-width compute node and the ports on I/O modules.....	9
<b>Figure 3-2</b> Connection between the MZ110 and the CX110.....	10
<b>Figure 3-3</b> Connection between the MZ110 and the CX111.....	10
<b>Figure 3-4</b> Connection between the MZ110 and the CX116.....	11

---

# Tables

---

<b>Table 2-1</b> Standards compliance.....	5
<b>Table 3-1</b> Compute nodes that support the MZ110.....	8
<b>Table 3-2</b> I/O modules to which the MZ110 can connect.....	9
<b>Table 3-3</b> OSs supported by the MZ110.....	11
<b>Table 3-4</b> Ethernet switches to which the MZ110 can connect.....	12
<b>Table 4-1</b> Technical specifications.....	14

# 1 Overview

---

## About This Chapter

[1.1 Functions](#)

[1.2 Appearance](#)



## 1.1 Functions

The MZ110 is an Ethernet NIC. It is used for E9000 compute nodes and provides four GE ports for compute nodes to connect to switch modules in the chassis.

The MZ110 uses the Broadcom BCM5719 chip and supports NIC applications.


## 1.2 Appearance

The MZ110 can be installed in slot Mezzanine1 (Mezz1 for short) or Mezzanine2 (Mezz2 for short) on a half-width E9000 compute node or in slot Mezz1, Mezz2, Mezzanine3 (Mezz3 for short), or Mezzanine4 (Mezz4 for short) on a full-width E9000 compute node.


The MZ110 provides network ports for connecting to switch modules:

- When the MZ110 is installed in slot Mezz1 or Mezz3, its four GE ports connect to switch modules in slots 2X and 3X.
- When the MZ110 is installed in slot Mezz2 or Mezz4, its four GE ports connect to switch modules in slots 1E and 4E.


Figure 1-1 MZ110 appearance

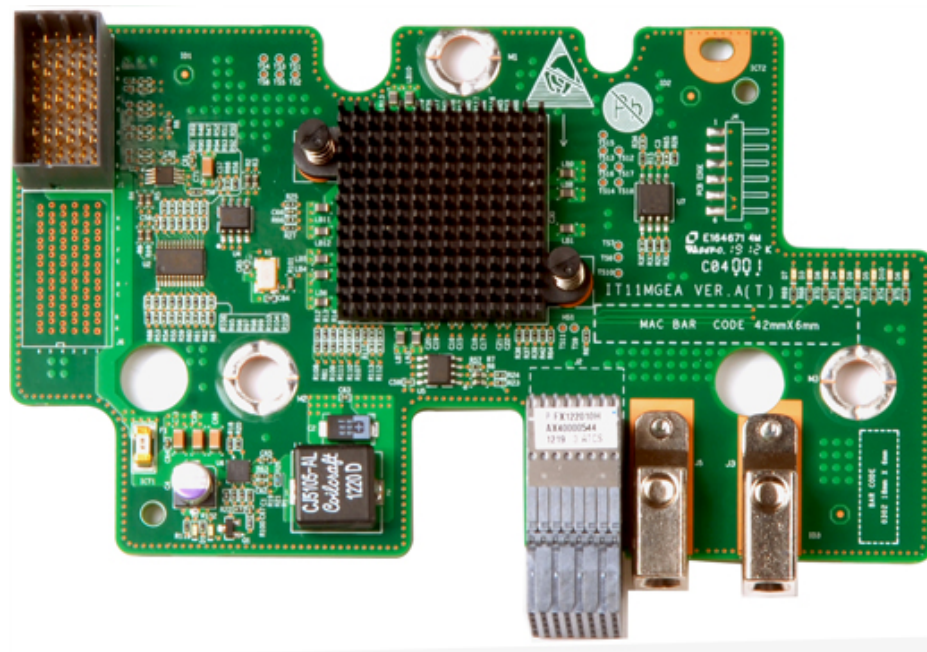

**Figure 1-2** MZ110 installation positions on a half-width compute node

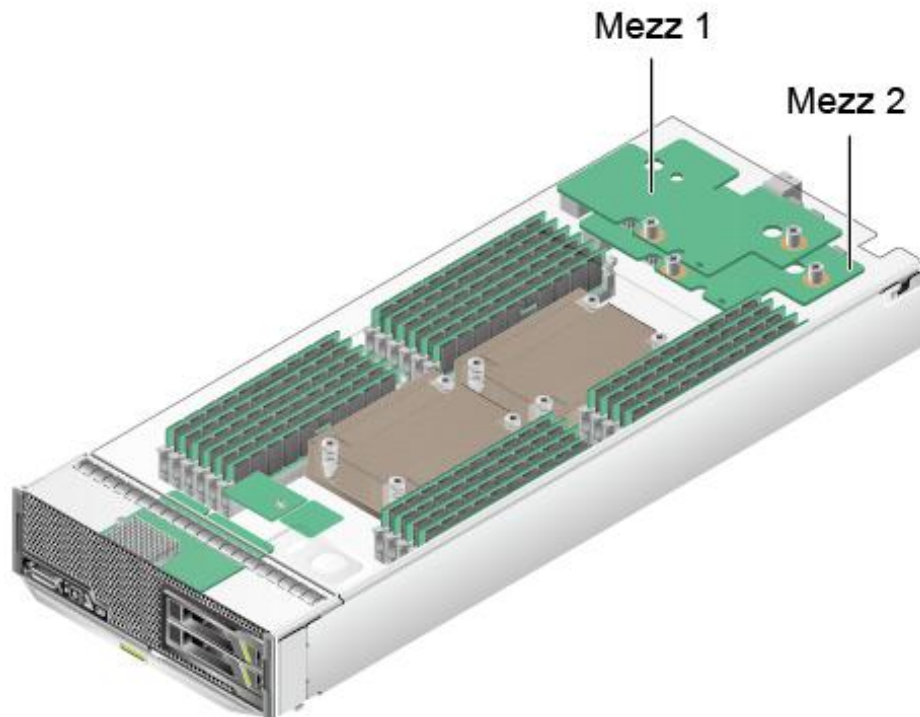

**Figure 1-3** MZ110 installation positions on a full-width compute node

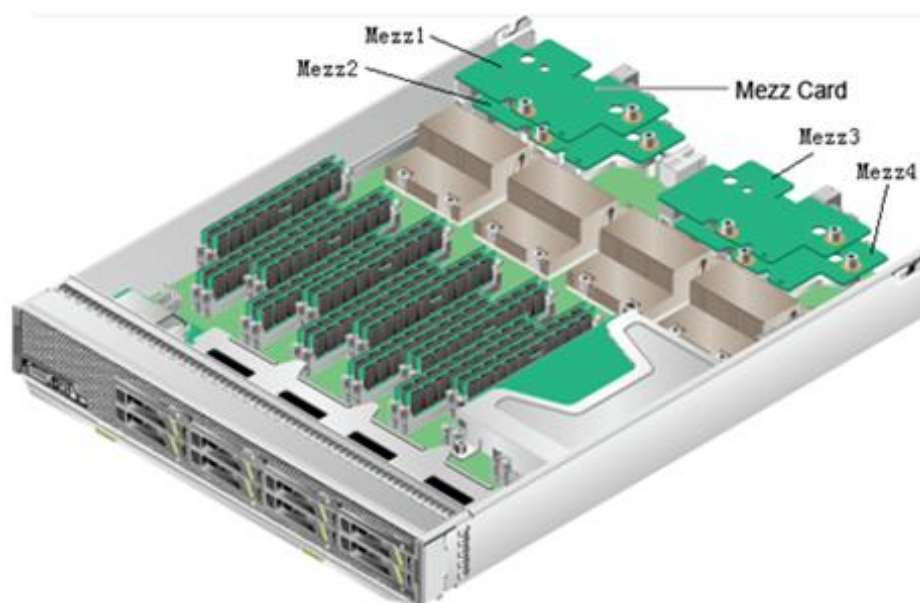

# 2 Features

---

## About This Chapter

[2.1 Feature List](#)

[2.2 Feature Description](#)

[2.3 Standards Compliance](#)

## 2.1 Feature List

The MZ110 supports the following features and performance specifications:

- NetQueue and Virtual Machine Queue (VMQ)
- Ethernet Preboot Execution Environment (PXE)
- TCP/IP/UDP Checksum Offload, Large Send Offload (LSO), and TCP Segmentation Offload (TSO) (UDP stands for User Datagram Protocol.)
- Receive Side Scaling (RSS) and Transmit Side Scaling (TSS)
- 802.1Q VLAN, supporting a maximum of 4094 VLANs
- Energy-Efficient Ethernet (EEE)
- IEEE 1588 and IEEE 802.1AS
- Jumbo frames of 9 KB

### NOTE

Certain functions are related to OS and switch features. For details, contact Huawei technical support.

## 2.2 Feature Description

### I/O Virtualization

The MZ110 supports I/O virtualization features, including NetQueue and VMQ. The MZ110 provides 17 receive queues and 16 transmit queues. Each queue sends 17 Message Signaled Interrupt Extended (MSI-X) interrupts to the host system.

### 802.1Q VLAN

The MZ110 supports a maximum of 4094 VLANs. Each GE port supports a maximum of 4094 VLANs. The VLAN IDs are integers ranging from 1 to 4094.

The MZ110 does not tag or untag packets, but transparently transmits them. VLAN IDs are specified by the operating system (OS) on an E9000 compute node.

### RSS and TSS

The MZ110 supports RSS and TSS. RSS supports queue-based MSI-X interrupts and UDP RSS Hash. TSS supports multiple TX queues and queue-based MSI-X interrupts.

## 2.3 Standards Compliance

[Table 2-1](#) lists the standards and protocols that the MZ110 complies with.

**Table 2-1** Standards compliance

Standard	Protocol
IEEE 802.3x	Flow Control and Back Pressure

Standard	Protocol
IEEE 802.3z	1000BASE-X
IEEE 802.3az	Energy-Efficient Ethernet
IEEE 802.1AS	Time Synchronization
IEEE 802.1Q	VLAN Tagging

# 3 Applications

---

## About This Chapter

- [3.1 Compatible Compute Nodes](#)
- [3.2 Connected I/O Modules](#)
- [3.3 MZ110 Networking](#)
- [3.4 Supported OSs](#)
- [3.5 Connected Ethernet Switches](#)

## 3.1 Compatible Compute Nodes

The MZ110 can be installed in slot Mezz1 or Mezz2 on a half-width compute node or in slot Mezz1, Mezz2, Mezz3, or Mezz4 on a full-width compute node. [Table 3-1](#) lists the compute nodes that support the MZ110 and its installation positions on them.


**Table 3-1** Compute nodes that support the MZ110

Compute Node	Number of Mezz Module Slots	MZ110 Installation Position
CH121	2	Mezz1 and Mezz2
CH121 V3	2	Mezz1 and Mezz2
CH220	1	Mezz1
CH220 V3	4	Mezz1, Mezz2, Mezz3, and Mezz4
CH221	1	Mezz1
CH222	2	Mezz1 and Mezz2
CH222 V3	2	Mezz1 and Mezz2
CH240	2	Mezz1 and Mezz2
CH242	4	Mezz1, Mezz2, Mezz3, and Mezz4
CH242 V3	4	Mezz1, Mezz2, Mezz3, and Mezz4

## 3.2 Connected I/O Modules

MZ110s can connect to I/O modules (switch modules or interface boards). [Figure 3-1](#) shows the connections between the MZ110s on a half-width compute node and the ports on I/O modules.

**Figure 3-1** Connections between the MZ110s on a half-width compute node and the ports on I/O modules

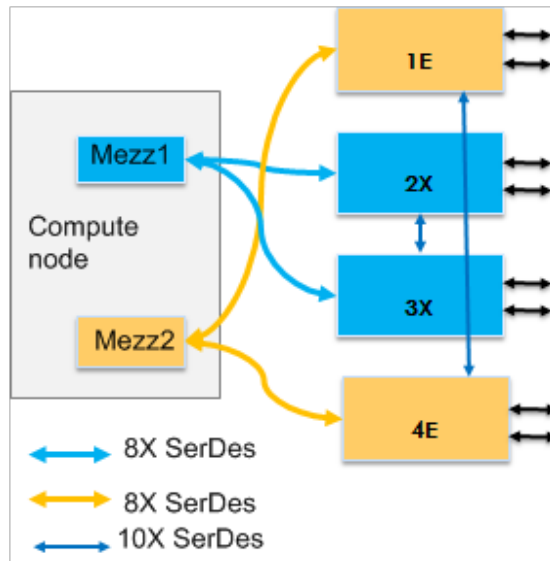

There are two or four groups of Serializer/Deserializer (SerDes, known as high-speed interconnect line) between each compute node and I/O module slots.

- Mezz1: 8X SerDes for connecting to I/O module slots 2X and 3X
- Mezz2: 8X SerDes for connecting to I/O module slots 1E and 4E
- Mezz3 (available only on a full-width compute node): 8X SerDes for connecting to I/O module slots 2X and 3X
- Mezz4 (available only on a full-width compute node): 8X SerDes for connecting to I/O module slots 1E and 4E

**NOTE**

The MZ110 provides four ports, and only 2X of each 8X SerDes is used.

**Table 3-2** describes the I/O modules to which the MZ110 can connect.

**Table 3-2** I/O modules to which the MZ110 can connect

I/O Module	I/O Module Slot	MZ110 (Mezz1)	MZ110 (Mezz2)	Typical Configuration	Remarks
CX110	2X/3X	√	X	Yes	-
	1E/4E	X	√	No	-
CX111	2X/3X	√	X	Yes	-
	1E/4E	X	√	Yes	-




I/O Module	I/O Module Slot	MZ110 (Mezz1)	MZ110 (Mezz2)	Typical Configuration	Remarks
CX116	2X/3X	√	X	Yes	It is recommended that the CX116 not be installed in slot 2X or 3X.
	1E/4E	X	√	Yes	-

### 3.3 MZ110 Networking

The MZ110 can connect to I/O modules (switch modules or interface boards) to provide Ethernet services.

The MZ110 can work with the CX110 switch module to provide 4 Gbit/s bandwidth, and connect to the Internet through GE or 10GE ports on the CX110. See [Figure 3-2](#).

**Figure 3-2** Connection between the MZ110 and the CX110

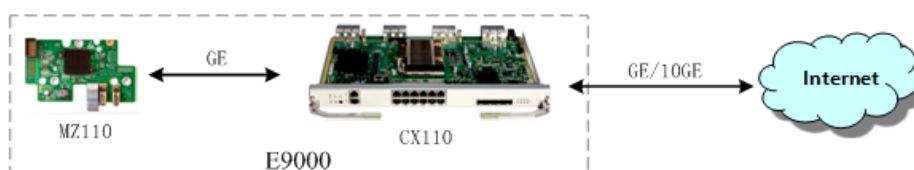


The MZ110 can work with the CX111 switch module to provide 4 Gbit/s bandwidth, and connect to the Internet through GE or 10GE ports on the CX111. See [Figure 3-3](#).

**Figure 3-3** Connection between the MZ110 and the CX111



The MZ110 can work with the CX116 pass through module to provide 4 Gbit/s bandwidth, and connect to the Internet through GE ports on the CX116 in pass-through mode. See [Figure 3-4](#).

**Figure 3-4** Connection between the MZ110 and the CX116

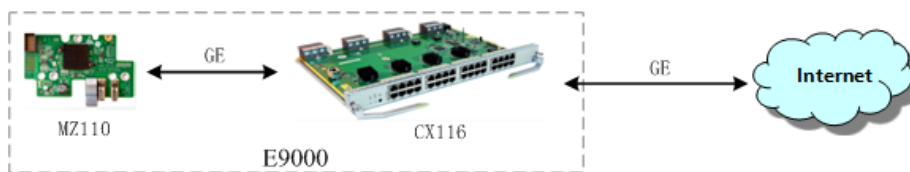

## 3.4 Supported OSs

**Table 3-3** lists the OSs supported by the MZ110.

**Table 3-3** OSs supported by the MZ110

OS	Version	Remarks
Redhat	RHEL 6.5	-
	RHEL 6.6	-
	RHEL 6.7	-
	RHEL 7.0	-
	RHEL 7.1	-
	RHEL 7.2	-
Suse	SLES 11.3	-
	SLES 11.4	-
	SLES 12.0	-
	SLES 12.1	-
VMware	Vmware ESXi 5.1.2	-
	Vmware ESXi 5.1.3	-
	Vmware ESXi 5.5.2	-
	Vmware ESXi 5.5.3	-
	Vmware ESXi 6.0	-
	Vmware ESXi 6.0.1	-
	Vmware ESXi 6.0.2	-
Windows	Windows 2008 R2 SP1	-
	Windows 2012	-
	Windows 2012 R2	-

The preceding table is for reference only. Compatible OSs for the MZ110 vary with the compute node type. For details, see the [Huawei Server Compatibility Checker](#).

## 3.5 Connected Ethernet Switches

**Table 3-4** lists the Ethernet switches to which the MZ110 can connect.

**Table 3-4** Ethernet switches to which the MZ110 can connect

Category	Vendor	Model	Remarks
Ethernet switch	Huawei	CX110	The CX110 is a GE switch module on the E9000.
		CX111	The CX111 is a GE switch module on the E9000.
		S9300	The MZ110 connects to the S9300 through the CX116 on the E9000.
		S5300	The MZ110 connects to the S5300 through the CX116 on the E9000.
	Cisco	Nexus 2148T	Nexus 2148T is a Cisco Fabric Extender. The MZ110 connects to Nexus 2148T through the CX116 on the E9000.
		Nexus 2224TP	Nexus 2224TP is a Cisco Fabric Extender. The MZ110 connects to Nexus 2224TP through the CX116 on the E9000.
		Nexus 2232TM	Nexus 2232TM is a Cisco Fabric Extender. The MZ110 connects to Nexus 2232TM through the CX116 on the E9000.
		Nexus 2248TP	Nexus 2248TP is a Cisco Fabric Extender. The MZ110 connects to Nexus 2248TP through the CX116 on the E9000.

# 4 Technical Specifications

---

## About This Chapter

### [4.1 Technical Specifications](#)

## 4.1 Technical Specifications

**Table 4-1** lists the technical specifications for the MZ110.

**Table 4-1** Technical specifications

Item	Specifications
Dimensions (length x width)	148 mm x 85 mm (5.83 in. x 3.35 in.)
Power supply	12 V DC
Net weight	0.12 kg (0.66 lb)
Maximum power consumption	5 W
Temperature	Operating temperature: 5°C to 40°C (41°F to 104°F) (ASHRAE Class A3 compliant)
	Storage temperature: - 40°C to +65°C ( - 40°F to +149°F)
Temperature change rate	15°C/h (27°F/h)
Humidity	Operating humidity: 5% RH to 85% RH (non-condensing)
	Storage humidity: 5% RH to 95% RH (non-condensing)
Altitude	<ul style="list-style-type: none"><li>● 40°C (104°F) at 1800 m (5905.44 ft)</li><li>● 30°C (86°F) at 3000 m (9842.40 ft)</li></ul> When the MZ110 is used at an altitude between 1800 m and 3000 m, the highest operating temperature decreases by 1°C (1.8°F) as the altitude increases by 120 m (393.70 ft).
PCIe port bandwidth	20 Gbit/s (PCIe 2.0 x4)
Port rate	1.25 Gbit/s
Number of ports	4
Port type	Ethernet
Chip model/manufacturer	BCM5719/Broadcom

---

# A Acronyms and Abbreviations

---

<b>E</b>	
EEE	Energy-Efficient Ethernet
<b>L</b>	
LSO	Large Segmentation Offload
<b>M</b>	
MSI	Message Signaled Interrupt
MSI-X	Message Signaled Interrupt-Express
<b>N</b>	
NIC	network interface card
<b>O</b>	
OS	operating system
<b>P</b>	
PCIe	Peripheral Component Interconnect Express
PXE	Preboot Execution Environment
<b>R</b>	
RSS	Receive Side Scaling
<b>T</b>	

TCP	Transmission Control Protocol
TSO	TCP Segmentation Offload
TSS	Transmit Side Scaling
<b>U</b>	
UDP	User Datagram Protocol
<b>V</b>	
VLAN	virtual local access network
VMQ	Virtual Machine Queue